

1- نوصّل كبل الشبكة بين الراوتر واللابتوب الموجود لدينا.

تأكد أن كبل الشبكة الموصول مع اللاقط موصول في مدخل WAN




2- نقوم بفتح أي متصفح موجود على اللابتوب.



3- نقوم بادخال الـ IP التالي 192.168.0.1 أو 192.168.1.1 في مربع البحث كما هو موضح في الصورة

ملاحظة : IP الدخول لاعدادات الراوتر يكون مكتوب على اللصاقة الموجودة خلف الراوتر

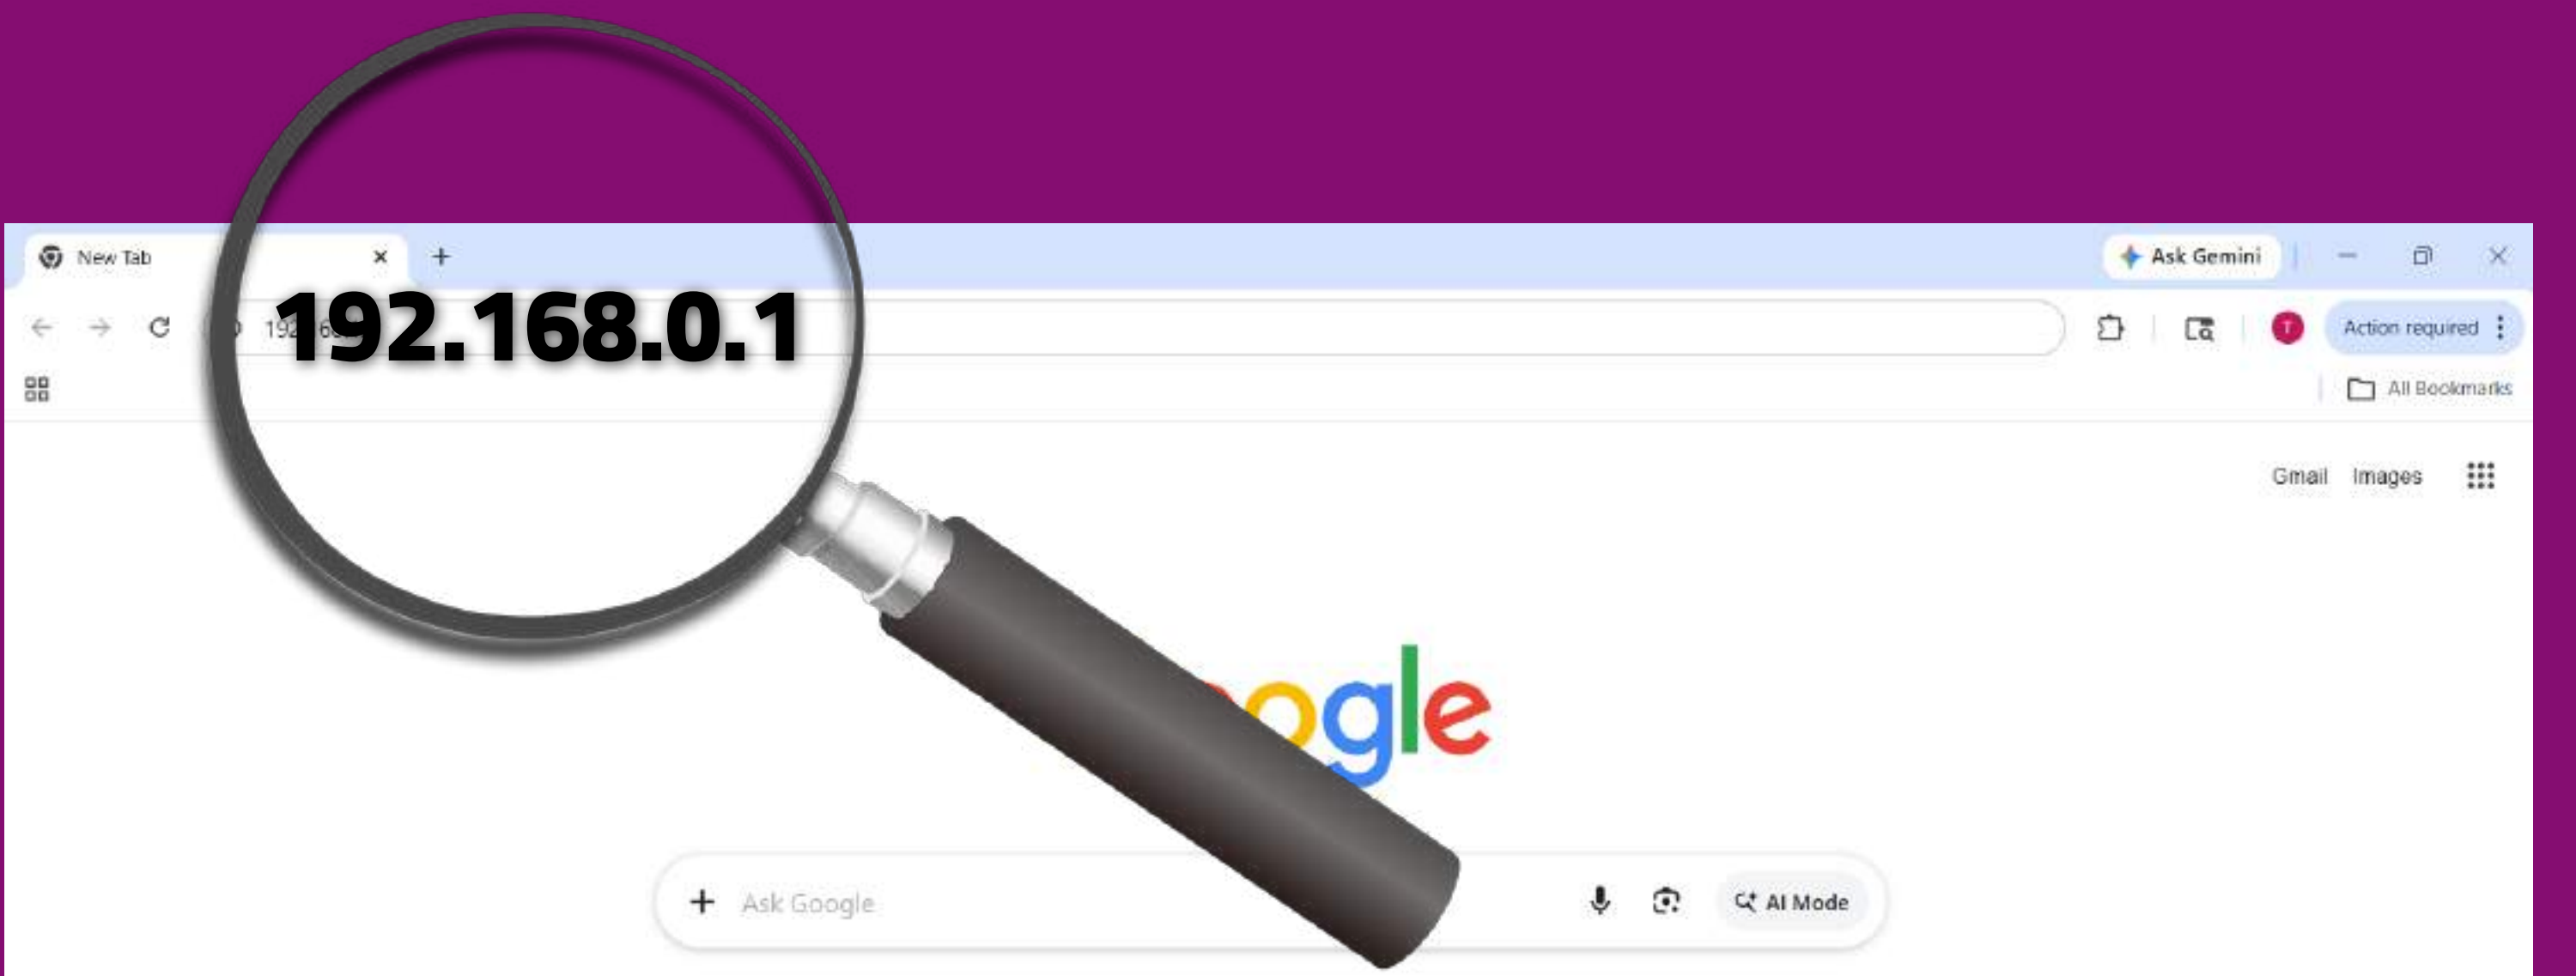

2054

www.runnet.sy

4- نقوم بضبط كلمة المرور للدخول لاعدادات الراوتر

ولتكن مثلاً : admin

Create Login Password

For security, please create a login password for management.

🔑

👁

🔑

👁

Start

5- نضغط على خيار Quick Setup ثم Next

TP-Link Wireless N Router WR840N
Model No. TL-WR840N

- Status
- Quick Setup
- Operation Mode
- Network
- Wireless
- Guest Network
- DHCP
- Forwarding
- Security
- Parental Controls
- Access Control
- Advanced Routing
- Bandwidth Control
- IP & MAC Binding
- Dynamic DNS
- IPv6
- System Tools
- Logout

Quick Setup - Start

Run the Quick Setup to manually configure your internet connection and wireless settings.
To continue, please click the **Next** button.
To exit, please click the **Exit** button.

Exit

Next

Quick Setup Help

With this guide, you can set the basic parameters to get a connection to the internet. Even if you are not familiar with this product, you can still finish the settings easily. If you are an expert, you can also choose to set what you want in the menu rather than to use this.

Click the **Next** button to continue.

6- نختار وفق الاتي

TP-Link Wireless N Router WR840N
Model No. TL-WR840N

- Status
- Quick Setup
- Operation Mode
- Network
- Wireless
- Guest Network
- DHCP
- Forwarding
- Security
- Parental Controls
- Access Control
- Advanced Routing
- Bandwidth Control
- IP & MAC Binding
- Dynamic DNS
- IPv6
- System Tools
- Logout

Quick Setup - Operation Mode

Choose Operation Mode:

Wireless Router
Share Internet connection from an Ethernet cable. For example, hotel room, small office...

WISP

Access Point

Range Extender

Back

Next

Operation Mode Help

Wireless Router(Default): In this mode, the device enables multiple users to share the Internet connection via Ethernet port. The LAN devices share the same IP from ISP through Wireless port. While connecting to Internet, the Ethernet port works as a WAN port.

WISP: In this mode, the device enables multiple users to share Internet connection from WISP. The LAN port devices share the same IP from WISP through Wireless port. While connecting to WISP, the Wireless port works as a WAN port. The Ethernet port acts as a LAN port.

Access Point: In this mode, this device can be connected to a wired

7- نقوم باختيار PPPoE وفق الاتي :

TP-Link Wireless N Router WR840N
Model No. TL-WR840N

Quick Setup - WAN Connection Type

The Quick Setup is preparing to set up your internet connection, please choose one type below according to the detailed description will be displayed after you choose the corresponding type.

Auto-Detect
 Dynamic IP (Most common option)
 Static IP
 PPPoE/Russian PPPoE
 You have DSL connection and is connected via PPPoE (Broadband Connection) on your computer or ex...
 L2TP/Russian L2TP
 PPTP/Russian PPTP
 Note: For users in some areas (such as Russia, Ukraine etc.), please contact your ISP to choose connect manually.
 More Advanced Settings

Back Next

WAN Connection Type Help
The Quick Setup supports five popular types of connection. To make sure the connection type your ISP provides, please refer to the ISP.
Auto Detect - If you do not know the connection type your ISP provides, use this option to allow the Quick Setup to search your Internet connection for servers and protocols and determine your ISP configuration. Make sure the cable is securely plugged into the WAN port before detection. The appropriate configuration page will be displayed when an active Internet service is successfully detected by the Router.
Dynamic IP - When the Router connects to a DHCP

8- نقوم بادخال اسم المستخدم وكلمة السر التي تم ارسالها من قبل المزود :

TP-Link Wireless N Router WR840N
Model No. TL-WR840N

Quick Setup - PPPoE

Please enter the Username and Password. If the Username/Password are unknown, please contact your ISP.

Username: ahmad22@runnet.sy
 Password: كلمة المرور
 Confirm password: تأكيد كلمة المرور
 Secondary Connection: Disabled Dynamic IP Static IP (For Dual Access)

Back Next

PPPoE Help
User Name and Password - Enter the User Name and Password provided by your ISP. These fields are case-sensitive.
Click the **Next** button to continue, or the **Back** button to go back to the previous page.

9- نقوم بضبط شبكة الـ WIFI وفق الاتي :

TP-Link Wireless N Router WR840N
Model No. TL-WR840N

Quick Setup - Wireless

Wireless Network Name: اسم شبكة Wifi (Also called SSID)

Security: WPA2-PSK (Recommended) Disable Wireless Security

Wireless Password: كلمة المرور للاتصال بالشبكة
(Enter ASCII characters between 8 and 63 or Hexadecimal between 8 and 64.)

More Advanced Wireless Settings

Back Next

Wireless Help
• **Wireless Network Name** - Enter a string of up to 32 characters. The same Name (SSID) must be assigned to all wireless devices in your network. The default SSID is set to be TP-Link_xxxx(or TP-Link_xxxx_5G)(xxxx indicates the last unique four characters of each Router's MAC address), which can ensure your wireless network security. But it is recommended strongly that you change your network name (SSID) to a different value. This value is case-sensitive. For example MYSSID is



رنت **RUNET**
link to the world

في حال مواجهة أي مشكلة
يمكنك الاتصال بقسم خدمة العملاء
على الرباعي : 0112054